

# BACKLIT

## Installation Instructions for BACKLIT in T-Grid

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING. RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. ALL INSTALLS SHOULD BE IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. ALL WIRES AND MATERIALS USED FOR INPUT/OUTPUT MUST BE UL APPROVED.

### Fixture Dimensions

Product	Dimensions
BACKLIT	2x2

Provided Hardware:  
Fixture  
Remote Driver  
Safety Wire


### Fixture Installation Steps for T-Grid:




1 Install fixture into ceiling grid.



2 Install remote driver on to grid above fixture.

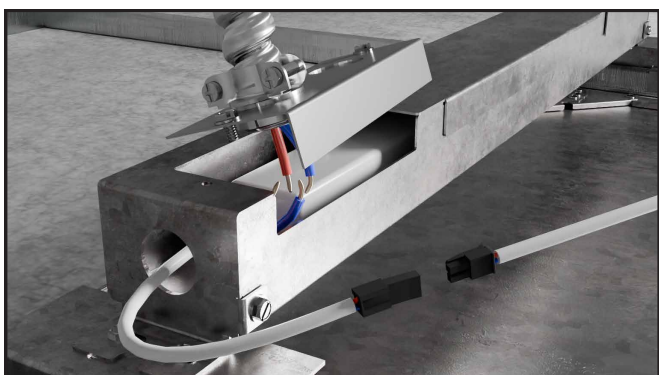


3 Attach external power wires to Driver in Driver Housing. Connect the fixture to the driver using the low voltage lead.

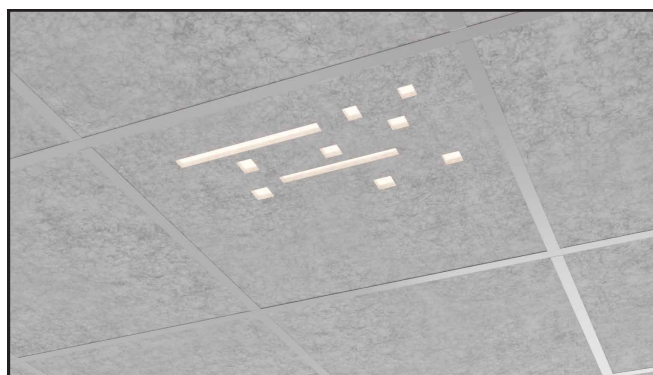

4 Power on fixture.


### Non-Plenum Rated EM Test Button:

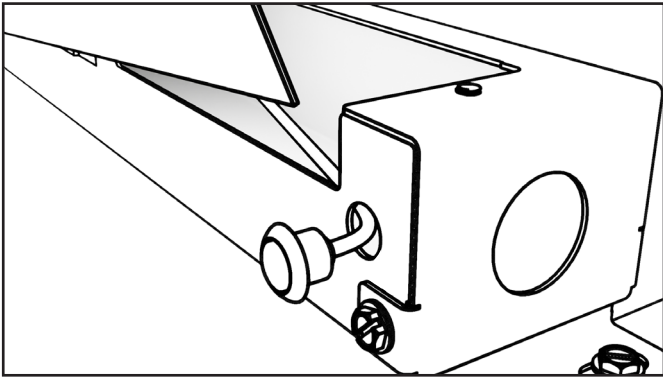

Install EM test button through side hole in driver box housing and secure using the included nut. Make necessary connections to driver.

See provided wiring diagram on manufacturer's EM installation instructions.

### Plenum Rated EM Test Button:

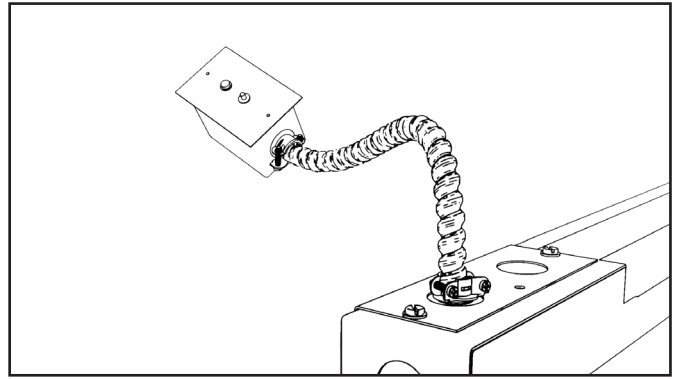

Install EM box using included plenum rated wire housing and connect to driver box housing through a knock out hole. Make necessary connections to driver.

See provided wiring diagram on manufacturer's EM installation instructions.